


38.1mm Dia., 3mm Thick, Uncoated, ISP Optics Lithium Fluoride (LiF) Window | LF-W-38-3

See More by [ISP Optics](#)

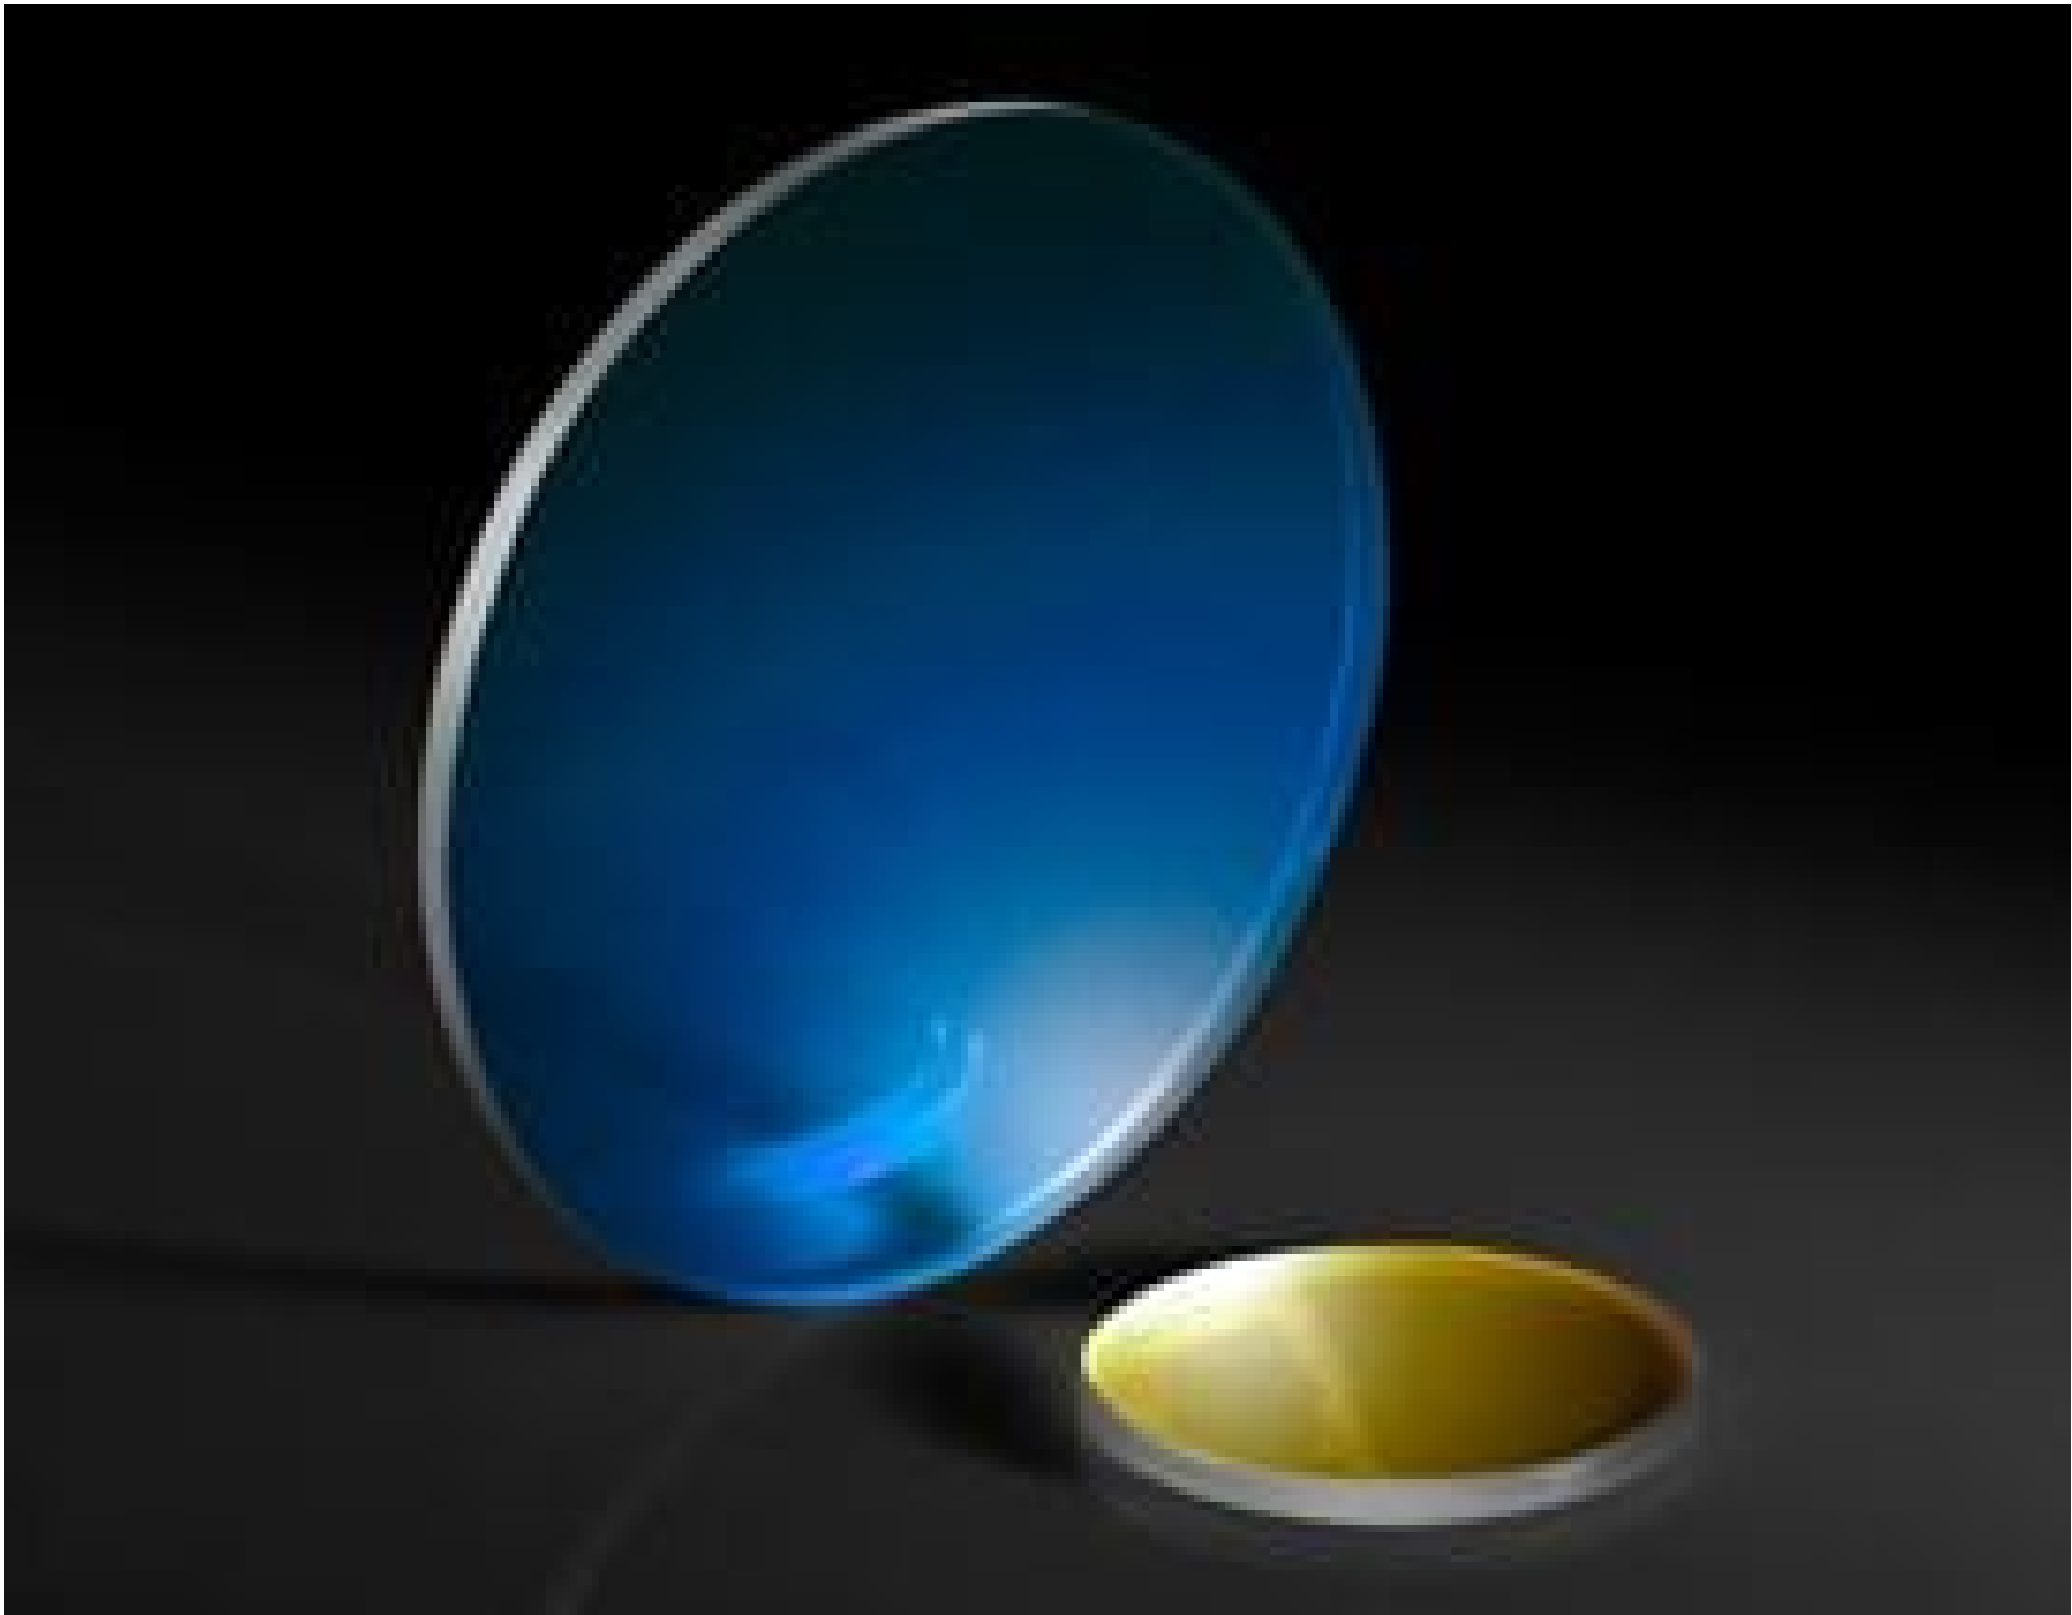

Stock ~~#24-477~~ **CLEARANCE** 2 In Stock

-

1

+

C\$362⁶⁰

ADD TO CART

Volume Pricing	
Qty 1+	C\$362.60 each
Need More?	Request Quote

Product Downloads

General	
LF-W-38-3	Model Number:
Protective Window	Type:
Physical & Mechanical Properties	
32.38	Clear Aperture CA (mm):

38.10 +0.00/-0.13	Diameter (mm):
3.00 ±0.13	Thickness (mm):
<3	Parallelism (arcmin):
Protective as needed	Bevel:
90	Clear Aperture (%):
Fine Ground	Edges:
0.33	Poisson's Ratio:
64.97	Young's Modulus (GPa):
102.00	Knoop Hardness (kg/mm²):

Optical Properties	
Uncoated	Coating:
Lithium Fluoride (LiF)	Substrate: ☐
1.392	Index of Refraction (n _d):
60-40	Surface Quality:
97.29	Abbe Number (v _d):
Random	Axis Orientation:
150 - 6000	Wavelength Range (nm):
2λ @ 632.8nm	Surface Flatness (P-V):

Material Properties	
2.64	Density (g/cm³):
37	Coefficient of Thermal Expansion CTE (10 ⁻⁶ /°C):

Regulatory Compliance	
View	Certificate of Conformance:

Product Details

- Excellent Vacuum UV (VUV) Transmission
- High Transmission from 150nm - 6µm
- Low Index of Refraction

ISP Optics Lithium Fluoride (LiF) Windows provide excellent transmission in the vacuum ultraviolet (VUV) wavelength range of 150 – 200nm, as well as at the hydrogen Lyman-alpha line (121nm). In addition to high transmission into the UV, these windows also feature superior transmission in the Visible and Infrared up to 6µm. Lithium fluoride has a low index of refraction, allowing these windows to be used without an anti-reflection (AR) coating. ISP Optics Lithium Fluoride (LiF) Windows are ideal for use as UV transmission windows in spectroscopy applications, as a diffracting element in X-ray spectrometry, or as infrared windows for thermal imaging applications.

Note: Lithium fluoride is sensitive to thermal shock and is attacked by atmospheric moisture at temperatures above 400°C.

Special Handling

These optics require special handling to avoid damage and ensure long-term performance. Proper handling, cleaning, and storage are essential to maintain optical quality. Explore our [Optics Cleaning Resources](#) for step-by-step guides and best practices. For personalized assistance, [Email us](#) or [Chat](#) with our technical support team.



Component Handling Tools